

Package Contents

- CA2 FireWire/USB portable hard drive
- Cables: USB cable, USB power cable, 6-Pin to 6-Pin FireWire
- Backup Software

System Requirements

Windows

- Microsoft Windows 2000, XP, 2003, or Vista

Macintosh

- Mac OS 9.1 or later

Using the Hard Drive

Connecting using FireWire

1. Connect the appropriate FireWire cable to the FireWire 800 or 400 port on your computer. Connect the other end of the cable to the drive.
2. The led will illuminate indicating that power is present. Wait 10-30 seconds for the computer to recognize the drive. The drive is now ready for use.

Connecting using USB

1. Connect the USB cable to a USB port on the computer. Connect the other end of the cable to the USB port on the drive.
2. Connect the USB power cable to a USB port on your computer (two ports may be necessary for adequate power). Connect the other end to the DC jack on the hard drive. As an alternative, a power adapter may be used instead of the USB power cable.
3. Wait 10-30 seconds for the computer to recognize the drive. The drive is now ready for use.

Notes:

- The steps above are a recommended method to connect your external drive to your computer. It is not always necessary to follow this exact sequence.
- The drive should only be connected via one interface at a time.

Formatting the Hard Drive

The drive is preformatted as NTFS (Win) or Mac OS Extended (Mac). For users who wish to reformat the drive, please visit our website for instructions.

To reformat using Windows:

- http://www.oyendigital.com/faq_firewire.html#9

To reformat using MAC OS:

- http://www.oyendigital.com/faq_firewire.html#7

Disconnecting the Hard Drive

Windows

1. Close all windows and quit all applications that are accessing the external drive.
2. Click the green “Eject Hardware” (Safely Remove Hardware) icon in the system tray and highlight the external drive.
3. Wait for a few seconds until the system prompts “You may safely remove this device.”
4. You can now safely turn off the external drive or disconnect the cable from the appropriate port.

Macintosh

1. Close all windows and quit all applications that are accessing the external drive.
2. Drag the external drive to the Trash/Eject icon to dismount it from the desktop.
3. After the disk icon has disappeared from the desktop, you may safely turn off the external drive or disconnect the cable from the appropriate port.

Product Warranty

This product has a two-year repair/replacement warranty provided by Oyen Digital LLC. This warranty is nontransferable and is limited to the original purchaser. For warranty service, please email our warranty department at rma@oyendigital.com.