

Package Contents

- Oyen Digital MiniPro FireWire/USB portable hard drive
- Cables: USB cable, USB power cable, 9-Pin to 6-Pin FireWire
- Manual

System Requirements

Windows

- Microsoft Windows 98SE, 2000, XP, 2003, Vista, 7 or higher

Macintosh

- Mac OS 9.2 or later

Using the Hard Drive

FireWire

1. Connect the appropriate FireWire cable to the FireWire port on your computer. Connect the other end of the cable to the drive.
2. Turn the power switch on. The led will illuminate indicating that power is present.
3. Wait 10-30 seconds for the computer to recognize the drive. The drive is now ready for use.

Note: If connecting to a 4-pin mini FireWire port, the drive must connect to two USB ports for power (using the included USB power cable) or the optional AC power adapter.

Connecting using USB

1. Connect the primary USB connector from the USB y-cable to a USB port on your computer.
2. Connect the other end of the USB cable to the hard drive.
3. Turn the power switch on. The led will illuminate indicating that power is present. Wait 10-30 seconds for the computer to recognize the drive. The drive is now ready for use.

Notes:

- Older laptops/desktops may require that both of the USB connectors are connected to two USB ports on your computer.
- The drive should only be connected to your computer via one interface at a time (FireWire or USB).

Formatting the Hard Drive

The drive is preformatted as NTFS (Win) or Mac OS Extended (Mac). For users who wish to reformat the drive, please visit our website for instructions.

To reformat using Windows:

- http://www.oyendigital.com/faq_firewire.html#9

To reformat using MAC OS:

- http://www.oyendigital.com/faq_firewire.html#7

Disconnecting the Hard Drive

Windows

1. Close all windows and quit all applications that are accessing the external drive.
2. Click the green “Eject Hardware” (Safely Remove Hardware) icon in the system tray and highlight the external drive.
3. Wait for a few seconds until the system prompts “You may safely remove this device.”
4. You can now safely turn off the external drive or disconnect the cable from the appropriate port.

Macintosh

1. Close all windows and quit all applications that are accessing the external drive.
2. Drag the external drive to the Trash/Eject icon to dismount it from the desktop.
3. After the disk icon has disappeared from the desktop, you may safely turn off the external drive or disconnect the cable from the appropriate port.

Product Warranty

This item includes a 2-year repair/replacement warranty provided by Oyen Digital. The warranty is non-transferable and is limited to the original purchaser. Warranty service may be requested by completing the form at the following link: www.oyendigital.com/rma-request-form.html. For our complete warranty policy, please visit: www.oyendigital.com/warranty.html.