

Package Contents

- Oyen Digital MiniPro eSATA/USB 2.5" Portable Hard Drive
- Cables: USB cable, eSATA cable, USB power cable (DC Jack to dual USB Type-A)
- Manual

System Requirements

- Windows 98SE, 2000, XP, 2003, Vista, 7 or higher
- Mac OS 9.2 or higher (eSATA requires OS X 10.2 or higher)

Using the Hard Drive

Connecting via eSATA:

1. Connect the eSATA cable to the eSATA port on your computer. Connect the other end of the cable to the hard drive.
2. Connect the primary USB connector from the USB power cable to a USB port on your computer. Connect the other end of the cable to the DC jack on the hard drive.
3. Turn the power switch on. Wait 10-30 seconds for the computer to recognize the drive.
4. The drive is now ready for use.

Connecting via USB:

1. Connect the primary USB connector from the USB y-cable to a USB port on your computer.
2. Connect the other end of the USB cable to the hard drive.
3. Turn the power switch on. Wait 10-30 seconds for the computer to recognize the drive. The drive is now ready for use.

Notes:

- Older laptops/desktops may require that both of the USB connectors are connected to two USB ports on your computer.
- Front USB ports on a desktop may not be able to provide adequate power.
- If connecting to a USB Hub, make sure it is a powered Hub.
- The AC adapter can be used in place of USB bus power.
- The drive should only be connected to your computer via one interface at a time (eSATA or USB).

Disconnecting the Hard Drive

Windows

1. Close all windows and applications that are accessing the drive.
2. Click the green "Eject Hardware" (Safely Remove Hardware) icon in the system tray and highlight the external drive.
3. Wait for a few seconds until the system prompts "You may safely remove this device."
4. You can now safely disconnect the external hard drive.

MAC

1. Close all windows and applications that are accessing the drive.
2. Drag the external drive to the Trash/Eject icon to dismount it from the desktop.
3. After the disk icon has disappeared from the desktop, you may safely disconnect the external hard drive.

Reformatting the Hard Drive

The drive is pre-formatted as FAT32, which is compatible with Windows and Mac. For users who wish to reformat the drive, please visit our website for instructions.

To reformat using Windows:

- visit: http://oyendigital.com/FAQs_USB.html#10

To reformat using MAC OS:

- visit: http://oyendigital.com/FAQs_USB.html#8

** If the drive will be used exclusively with a MAC, we recommend reformatting the drive as HFS+. If the drive will be used exclusively with Windows, we recommend reformatting the drive as NTFS.*

Product Warranty

This product includes a two year repair/replacement warranty provided by Oyen Digital LLC. This warranty is non-transferable and is limited to the original purchaser. Warranty service may be requested by completing the form at the following link: www.oyendigital.com/rma-request-form.html. For our complete warranty policy, please visit: www.oyendigital.com/warranty.html.