



(3) Hard Drive Assembly (cont.)

c) Screw the hard drive into the chassis using the mounting holes on the side.

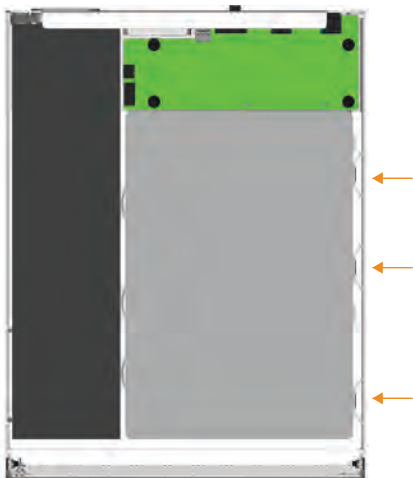

(3) Hard Drive Assembly (cont.)

d) Flip over the chassis and tighten screws into the aligned holes.

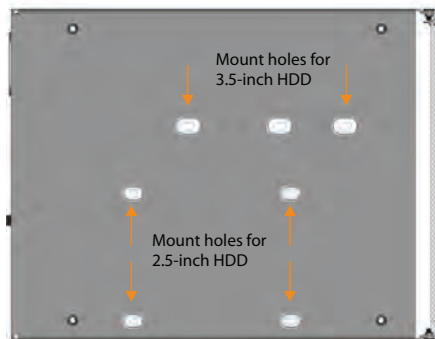

e) Slide the bracket back into the housing. Affix the bottom screws.

(4) Hard Drive Formatting

If you have installed a new drive, you must first format the drive before it is accessible. Use Disk Management in Windows or Disk Utility in Mac to format the drive.

Instructions: www.oyendigital.com/format





HDX Pro C Enclosure Installation Guide

For more information, visit our website at www.oyendigital.com

(1) Specifications

Item name:	HDX Pro C
Supports:	3.5 inch HDD SATA
Interface:	USB-C (10 Gbps)
Materials:	Aluminum
Chipset:	ASMedia 235CM & Via VL822
Power:	Input: 90-264 VAC, Output: 36W
Size:	8.25 x 6.5 x 1.5 Inches
Operating Temp:	5°C ~ 65°C
System:	Windows, Mac OS, Linux

(2) Detailed View

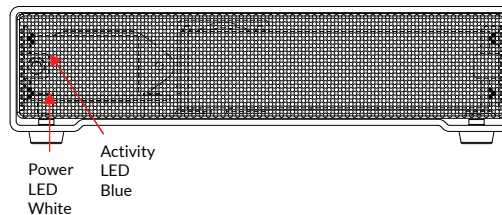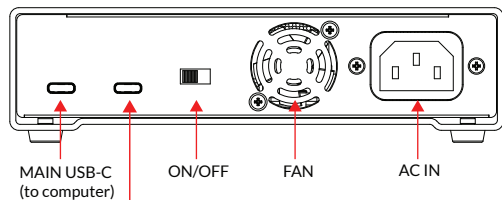

(3) Hard Drive Assembly

- Remove the 4 screws from the bottom of the housing. Slide out the inner bracket.
- Slide the hard drive onto the SATA connector at a slight angle.

