



1.Remove all HDD trays

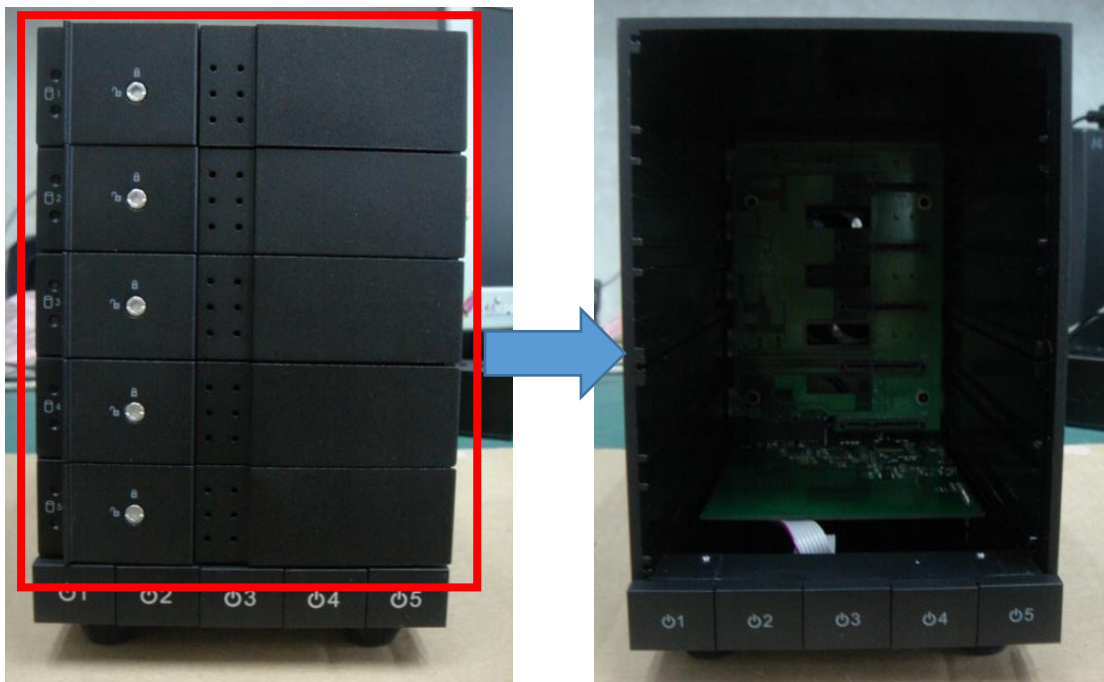


2. Remove the two rear rubber feet and unscrew the screws underneath.

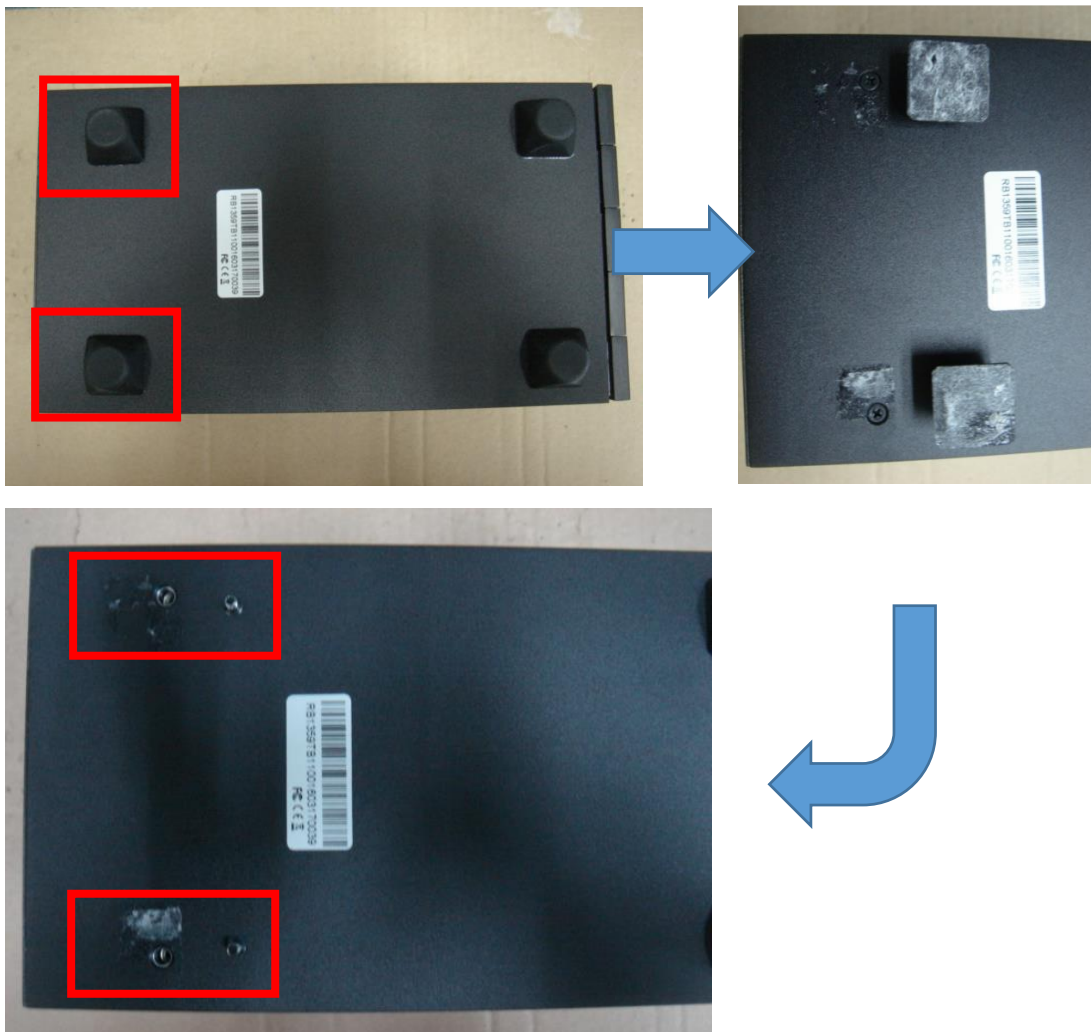


3. Remove the screws on backplane.




4. Take out the PCBA.

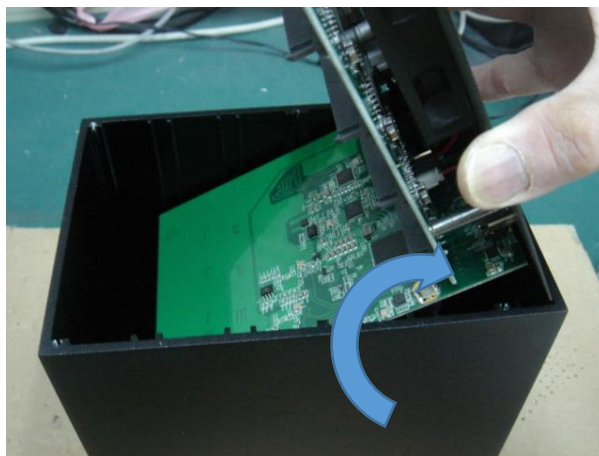


5. Separate the two PCBAs from each other.

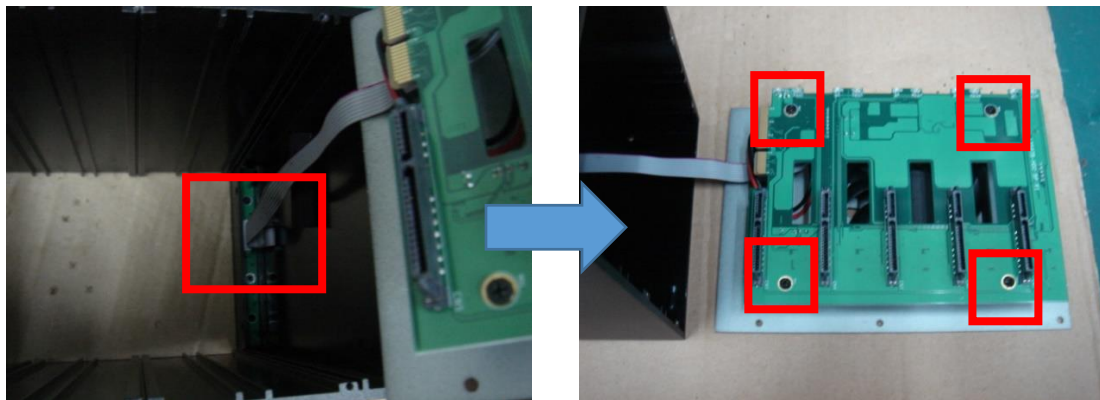

6. Remove the screws from the rear back PCBA.

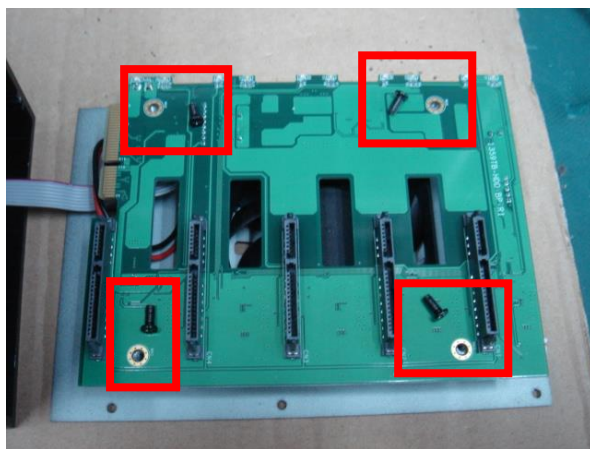

7. Disconnect the power switch and remove from the backplate.

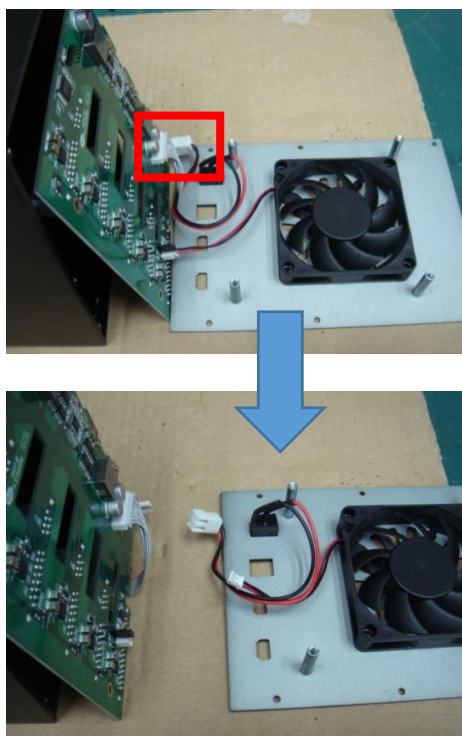

8. Repeat all steps in reverse to re-assemble.